



Functions may vary between phone models and brands.

Extend the lifespan of your earphones:

- Never pull by the cable to remove the earphone.
- Pull straight apart-do not twist. Cable is a snap fit, not threaded.
- Be gentle, never use more force than needed.

1. TWELVE DRIVER EARPHONES

Degauss Labs Twelve Drivers Earphones, built with balanced armature speakers, deliver a detailed soundstage free from outside noise.

The powerful and stylish Twelve Drivers earphones come with a detachable mmcxcable, adapters, a carrying pouch, and interchangeable Sound isolating buds for a comfortable and personalized fit.

2. CHOOSING A BUD

Select an earphone bud that provides the best fit and sound isolation. It should be easy to insert, fit comfortably and easy to remove.

3. CHANGING BUDS

- Twist and pull to remove the bud from the nozzle.
- Slide on a new bud so that it completely covers the barb and the nozzle.

Caution: If the barb or any of the nozzle is exposed, the bud is not properly installed. Replace buds if they do not tightly grip the nozzle. To ensure proper fit and performance, use only buds supplied or recommended by Degauss Labs.

4. WEARING THE EARPHONES

Wear them like earplugs. A good acoustic seal provides maximum bass.

1. Select a bud.
2. Twist and pull to remove. Push new bud on fully. Compress foam bud slightly.
3. Insert firmly into ear. Wear cable over and behind ear. Tighten the cable and take up slack by raising the cable cinch.

Important: If there seems to be a lack of low frequency response (bass), this means that the earphone bud is not forming a tight seal. Gently push the earphone deeper into the ear canal or try a different bud.

Warning: Do not push the earphone bud beyond the ear canal opening. Wearing the cable over the ear and securing it behind the head can help keep the earphones in place during physical activity.

5. REMOVING THE EARPHONES

Grab the body of earphone and gently twist to remove.

Note: Do not pull on cable to remove the earphone.

6. DETACHABLE CABLE

You may need to detach the cable from the earphones to attach optional components or to replace the cable if it becomes damaged. To prevent accidental separation, the connector has a snap fit. Take special care to prevent damage to the earphone and connector.

- Do not use pliers or other tools.
- Grasp the connector and the earphone as close as possible to where they join.
- Pull straight apart-do not twist. Cable is a snap fit, not threaded.

Note: If you pull at an angle, the connector will not detach.

Do not pull on the cable or put any pressure on the earphone nozzle.

Listen for a click when connecting.

When reattaching the cable, match the "L" and "R" markings. For clear cables and earphones, match the color dots (Red=Right, Blue=Left).

7. MAINTENANCE & CLEANING

Careful maintenance ensures a tight seal between the bud and nozzle, improving sound quality and product safety.

- Keep the earphones and buds as clean and dry as possible.

• To clean the silicon buds, remove them from earphones, gently rinse in warm water and air dry. Regularly inspect the buds for damage and replace if necessary. Ear buds must be completely dry before reusing.

• Wipe the earphones and buds with mild antiseptic to avoid infections. Do not use alcohol-based disinfectants.

• Do not expose earphones to extreme temperatures.

• Replace buds if they do not fit properly.

• Do not attempt to modify this product. Doing so will void the warranty and could result in personal injury and/or product failure.

• Always keep your earphones in the carrying pouch when not in use.

8. CLEANING THE NOZZLE

If you notice a change in sound quality, remove the bud and check the nozzle of your earphone. If nozzle is blocked, clear obstructions.

If no obstruction is found or if sound quality does not improve, replace the bud with a new bud or disassemble the nozzle to clean inside.

Caution: When cleaning, do not force any object through the earphone nozzle! This will damage the earphone sound filter.